

## Instructions for the locker(CB-100)

1: Card function type (divided into 4 types)

One management card (up to 3 can be set), One master card (up to 5 can be set), waiter card (up to 15 can be set) and one guest card.

Punch the management card one time, it will set the guest card.

Punch the management card two times, it will set the waiter card.

Punch the management card three times, it will set the admin card.

Punch the management card four times, it will set the general card.

Punch 5 times to clear all the configured card information.

1. Setting method (The management card has been set up at the factory, please refer to the setting method of the management card if you need to reset it)

Set the management card: Clear all information through the initialization button: insert a small hole on the back of the lock cylinder, use a tool to insert it and press and hold for 3 seconds, a long beep, and a blue light flashes 3 times and 3 short beeps, all information is cleared. At this time, the first card induced is the management card by default.

Note: The management card has functions of setting, deleting and unlocking

1. Set up a single card to open the door: use the management card to sense once, and the corresponding guest card will be sensed when the blue light flashes. After the flashing stops, the guest card can open the door.

Note: If another guest card is set in the management card, the new guest card can open the door, and the previous guest card will automatically become invalid.

2. Set the dual card to open the door: (under the setting of single card to open the door) use the management card to sense 2 times continuously, when the blue light flashes, the waiter card is sensed, the blue light stops flashing, the setting is successful, and the door lock automatically turns to dual Card mode, you need to take the guest card and waiter card at the same time to open the door.

Note: The door lock supports continuous setting. If you need multiple waiter cards, you can continuously sense the waiter card settings when the management card continuously senses the blue light flashes twice.

3. Set up multiple administrator cards: use the management card to sense 3 times, when the blue light flashes, sense a new administrator card once, the blue light stops flashing, the setting is successful, and the management card can open the door.

Note: The newly added administrator card also has the functions of setting, deleting and unlocking. If you need more than one, you can continuously sense the new management card settings when the management card continuously senses the blue light flashes three times.

4. Set the master card: use the management card to sense 4 times, when the blue light flashes, the master card is induced, and the blue light stops flashing. The setting is successful, and the master card can open the door.

Note: The master card can be unlocked when the door is opened by a single card or dual cards. If multiple master cards are needed, the master card setting can be continuously sensed when the management card continuously senses the blue light flashing 4 times.

4. Clear the information in the lock: After the management card is used for 5 consecutive inductions, after a long beep with 1 beep, and 3 short beeps with the blue light flashing 3 times, all the card information that has been set is cleared. Only keep the management card function.

### Precautions

1. The management card has the function of setting and deleting, and it should be kept properly. If the management card is lost, the lock needs to be initialized and reset.

2. After the master card is set up, all the locks can be opened, so please keep it properly.

3. If the power of the cabinet door lock is insufficient and the door cannot be opened, Pls insert the emergency power socket to unlock

4. Please use AA alkaline batteries.