

Insert Contactless Card For Power



iCC 01

Specifications

Rated Current:

40A

Power off:

20s delay


What are the uses of button switches?

Normally open button, it is mainly used to disconnect the switch contacts

Normally closed switch, it is mainly used for switching contact on

Normally open and normally closed button, it can be used to make contacts or break contacts

Dimensions

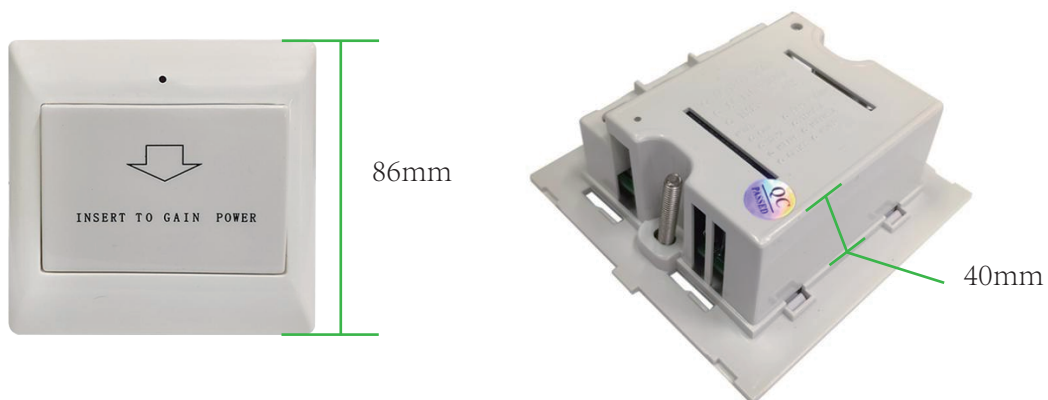

The product has a 20-second delay power outage design, which provides great convenience for customers.

When guests want to leave the room and push out the card, the 20-second delay shut-off will help them check everything and make sure everything is safe.

